

TNT™ Standalone Android Application

User Guide



Tactical Network Transfer™ (TNT)





Tactical Network Transfer™ - Overview

TNT™ is a mission planning, training and tactical transfer device that provides a secure IP network which enables communications and data processing when tactical networks and cloud resources are not available. This system reduces the burden of radio availability and cryptographic requirements in the field, which allows you to connect mobile tactical command post systems for mission planning, training, testing, mission rehearsal and system operational checks.

TNT™ is a portable low-voltage TAK enabled and networked device that allows tethered connections of computers, tablets, phones and other End User Devices (EUD's). The TNT provides automatic network routing for plug and play connections and includes a 1TB Secure FTP Server for imagery, data management, file access and storage.





Before We Begin...



This document assumes the following:

1. The Reader has followed the steps found in the TNT™ Setup Guide
2. The Reader has the system set up and the EUD is receiving an IP Address from the TNT™ System.

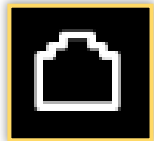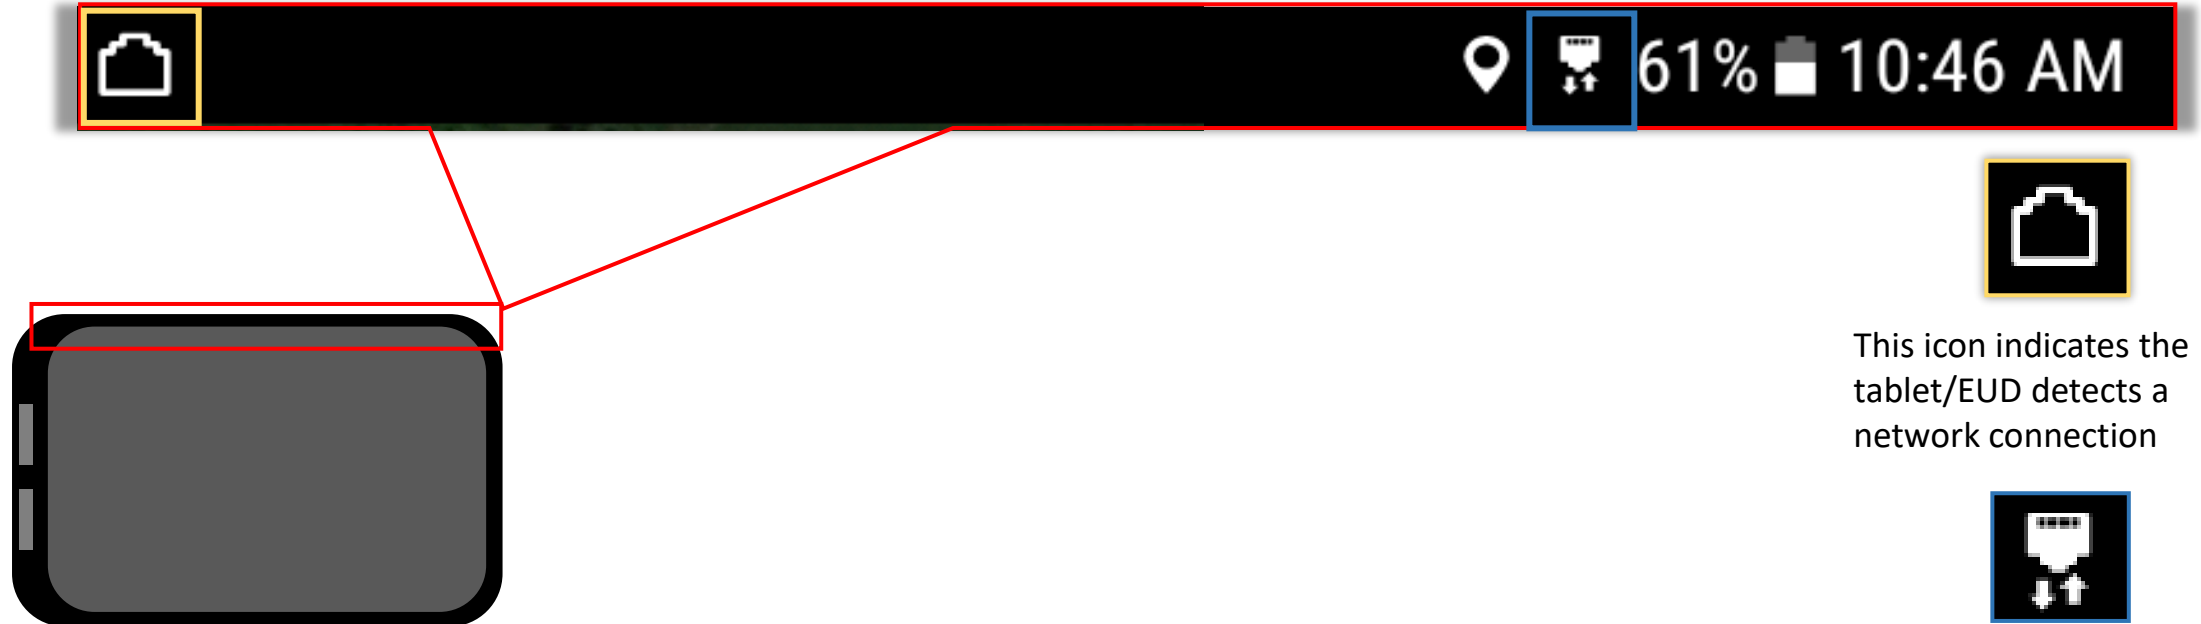

This icon indicates the tablet/EUD detects a network connection



This icon indicates the tablet/EUD is receiving an IP address from the TNT™ System

TNT™ App for Android Table of Contents





TNT™ Android App Overview	3
Install TNT™ Android App	7
TNT™ Android App Permissions	8
User Interface	9
Select TNT™	11
Hand Jam TNT™	12
Upload.....	14
Download.....	16
Manage.....	28
Preferences Overview.....	20
Orientation	21
About TNT.....	22
User Guide.....	23
Setup Guide.....	24

TNT™ App for Android Table of Contents cont.




Board Configuration.....	25
Board Config overview.....	27
Connect to Board.....	28
Configuration Settings.....	30
SA Network Settings.....	32
Network Settings.....	34
TCP Addresses.....	35
Add TCP Address.....	36
Factory Defaults,,.....	37
Reboot.....	38

Install TNT™ Standalone App


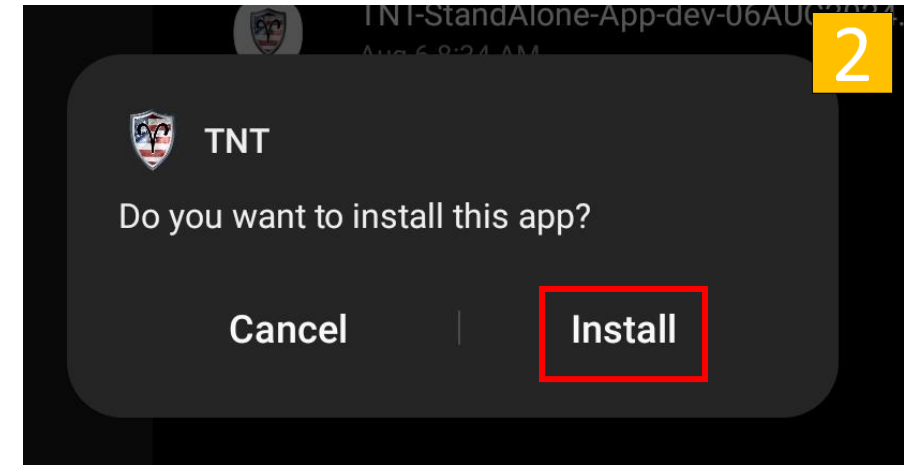
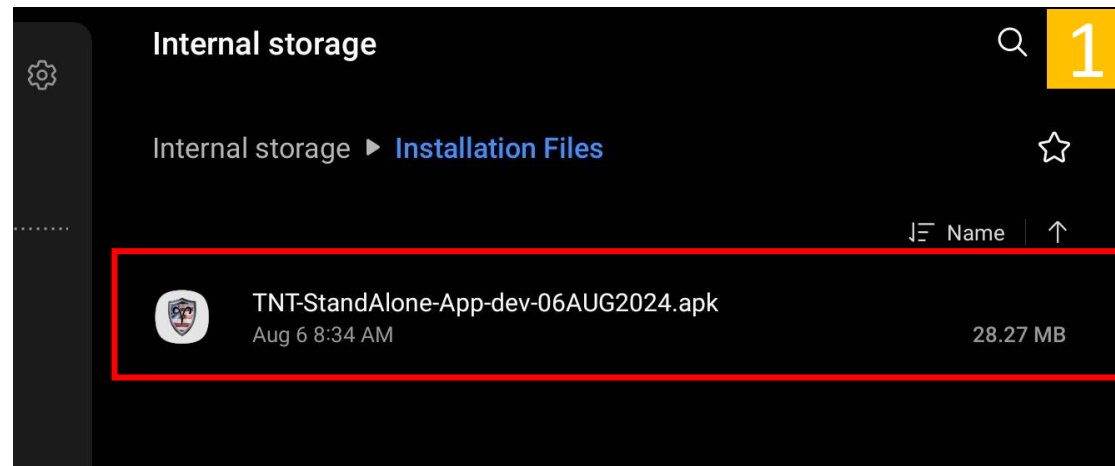


1. **Tap** the TNT Standalone App APK file to begin installation.
2. Review the Permissions Statement then **tap Install**.
3. **Tap Open** once the installation is complete.

Note: The actual APK name may change. Also, you may have to adjust the security settings on your device to install this application.

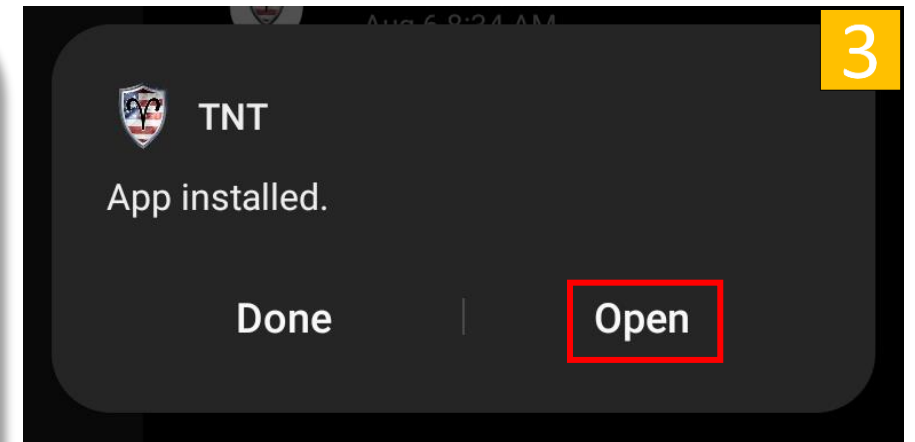

Allow App Permissions

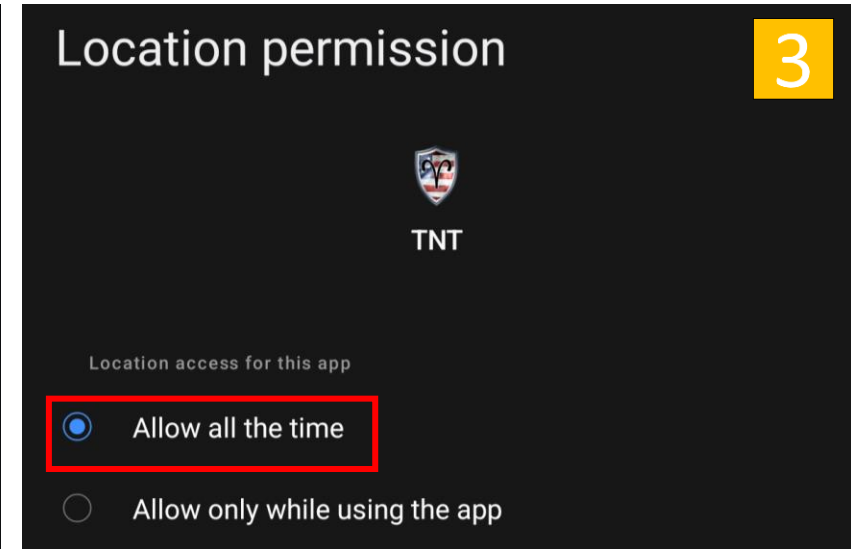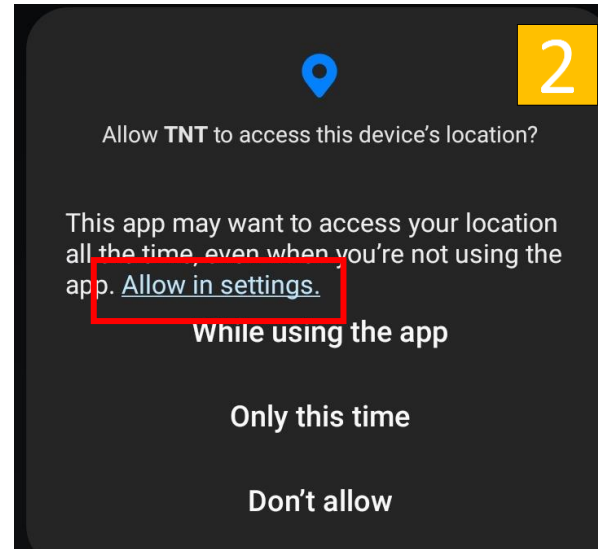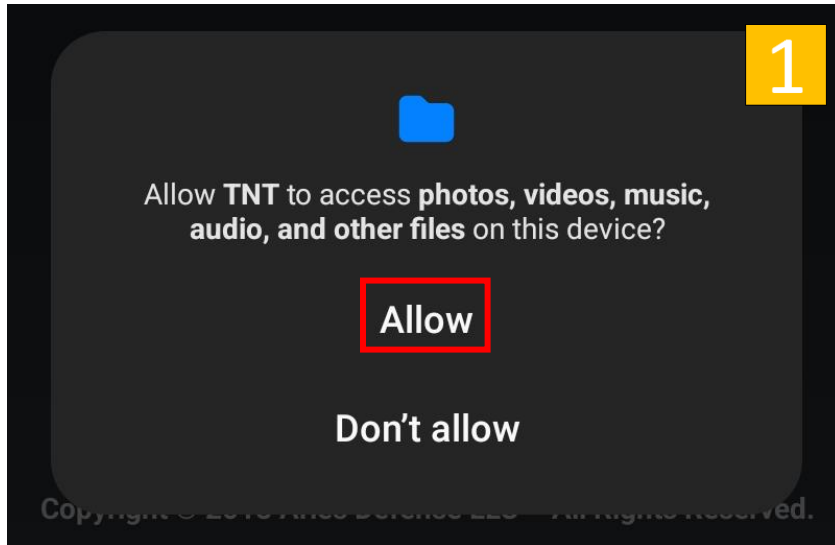

1. **Tap Allow** when prompted to set “Allow TNT to access photos, media, and files on your Device?”.
2. **Tap Allow in settings** when prompted to set “Allow TNT to access this device’s location?”
3. **Tap Allow all the time** when prompted to set TNT “location permission”

Failing to allow these permissions will limit / prevent proper functionality of the TNT™ System.

TNT™ Home Screen



TNT Back (File Navigation) Current TNT Path TNTConnection Status


The screenshot shows the TNT Home Screen with a dark theme. At the top, there is a status bar with the time 10:43, date Mon, Aug 5, and battery level 100%. Below the status bar is the TNT logo and the text 'TNT'. A red box highlights a back arrow icon on the left side of the screen. In the center, the text 'TNT' and '5ftp/FTP' are displayed, with a red box around '5ftp/FTP'. On the right side, a red box highlights a green square icon. Below this, a list of folders is shown: DTED (Size: 1024), MANUALS (Size: 1024), BRIEFS (Size: 1024), INSTALLERS (Size: 1024), IMAGERY (Size: 1024), and REPORTS (Size: 1024). At the bottom of the screen, there is a navigation bar with several icons: a red 'X', 'TNT', an upload icon, a download icon, a gear icon, and a right arrow icon. A red line connects the right arrow icon in the navigation bar to the 'More Options' button in the legend on the right.

	Close Plugin
	Select TNT
	Upload
	Download
	Preferences
	More Options
	New Folder
	Delete File
	Rename File
	Move File



TNT™ Standalone Android App: Select TNT

 Select TNT



TNT

TNT Callsign: TNT_2
TNT Address: 10.6.63.11

TNT Callsign: TNT_3
TNT Address: 10.6.63.12

TNT Callsign: TNT_1
TNT Address: 10.6.63.10

TNT Callsign: testing
TNT Address: 10.6.63.14

Hand Jam Cancel




Active Feed (Stales after 5 minutes of inactivity)

Delete Feed

Stale Feed

Hand Jammed Feed

Hand Jam TNT

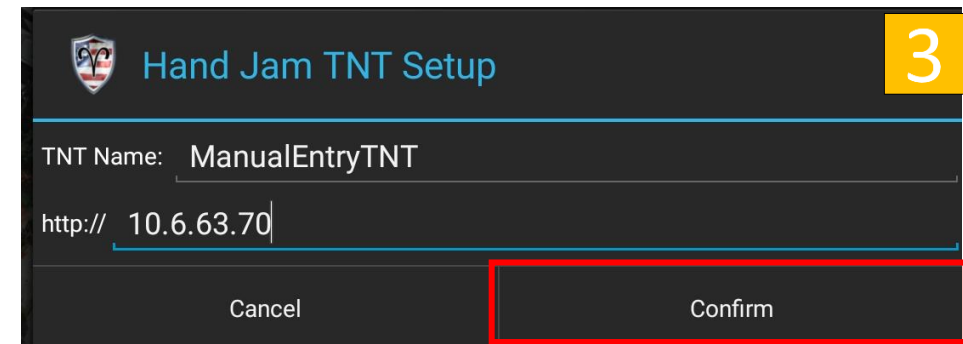
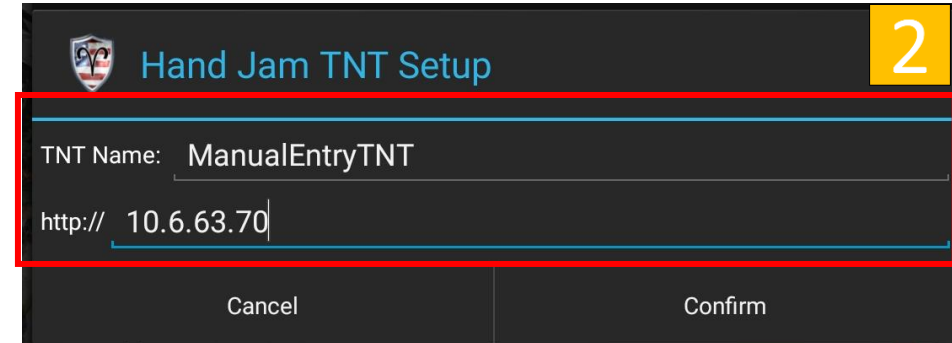
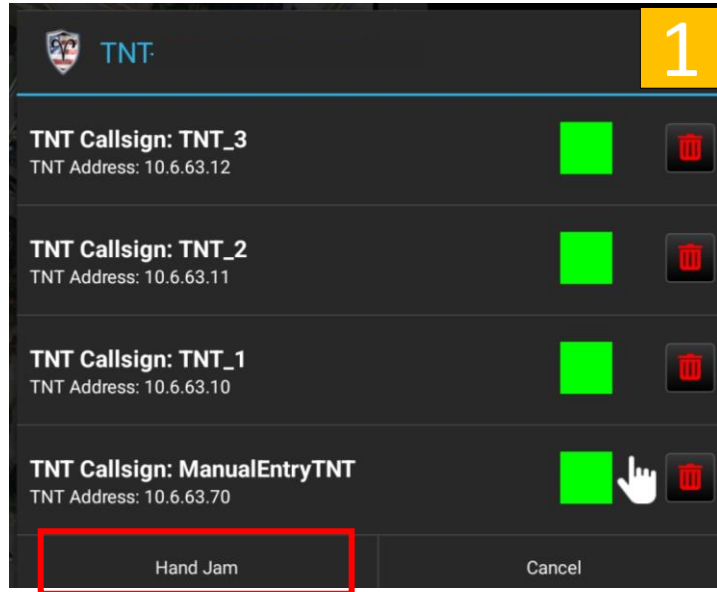


1. **Select** Hand Jam
2. **Enter** Required Fields
 - TNT Name is user defined.
 - The Default TNT URL is: 10.6.63.10.
3. **Tap** Confirm to continue.




TNT™ Standalone Android App: Upload

 Upload

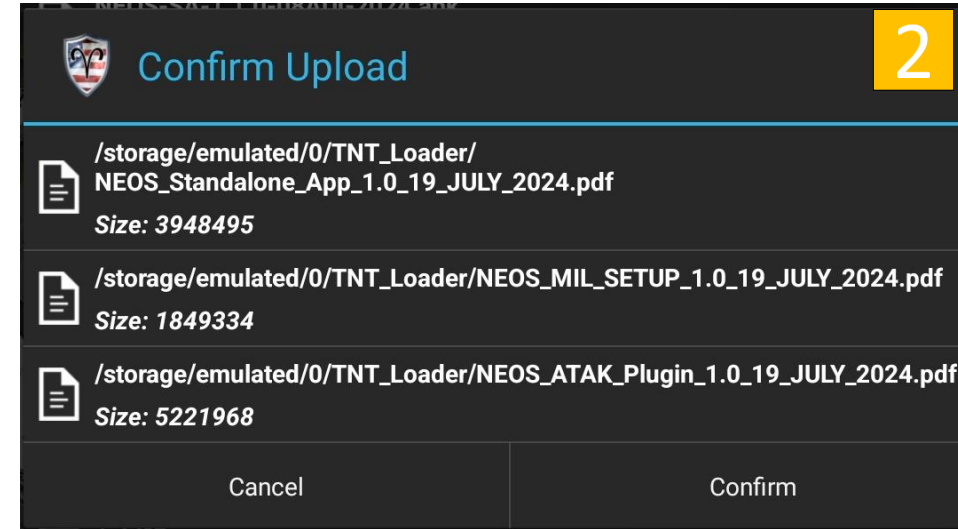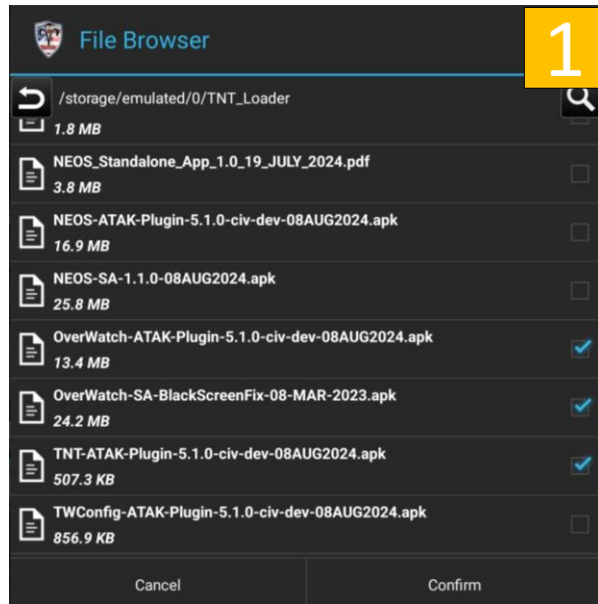



1. **Navigate** to the file path on the TNT where you want to upload files and then tap upload to select files to upload
2. **Confirm** the files
3. **Upload** files begins and a progress bar displays to track the progress of the upload

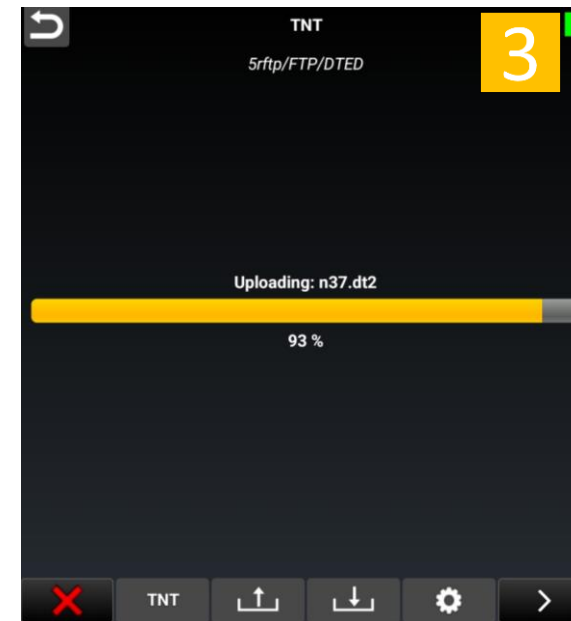




TNT™ Standalone Android App : Download

Download

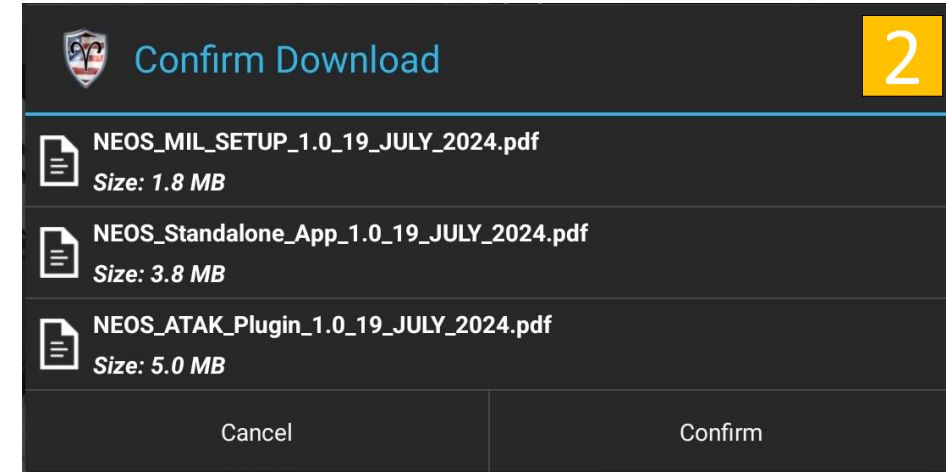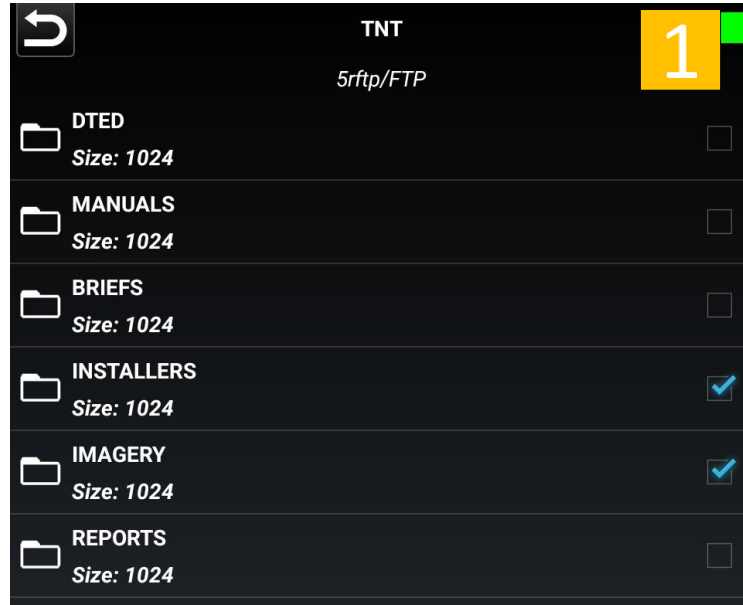

1. **Navigate** to the file path on the TNT where you want to download files from and then select files to download
2. **Confirm** the files
3. **Download** files begins and a progress bar displays to track the progress of the upload.





**Files are downloaded to internal/TNT/downloads*

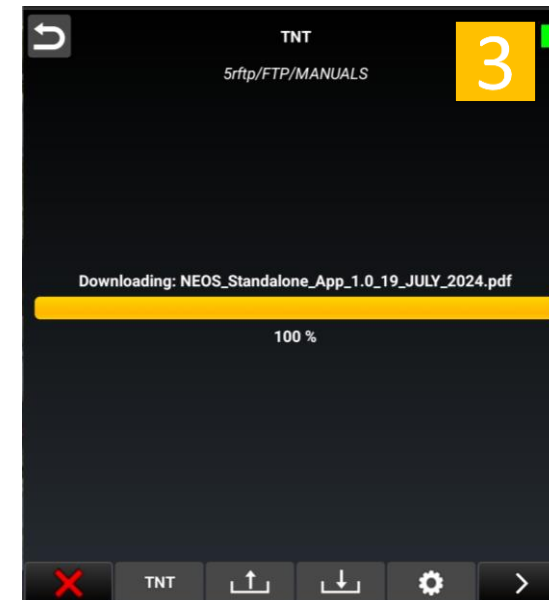



TNT™ Standalone Android App:: Manage

Manage

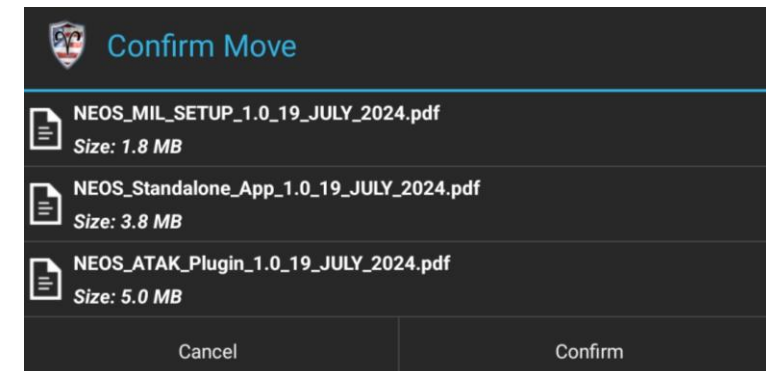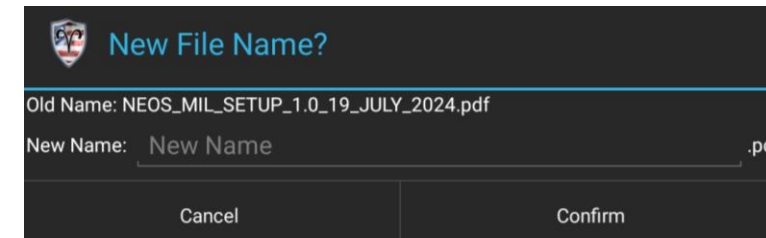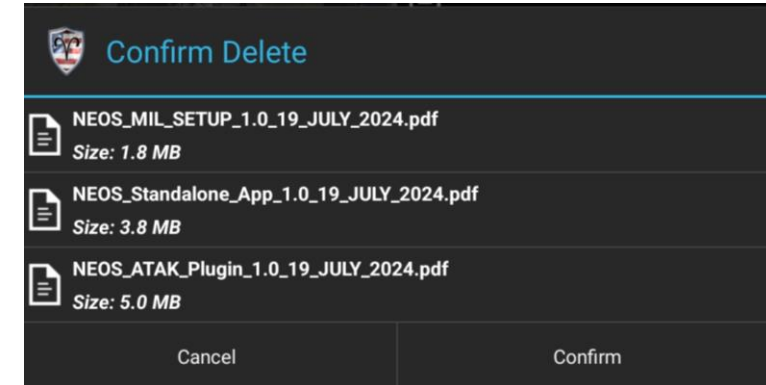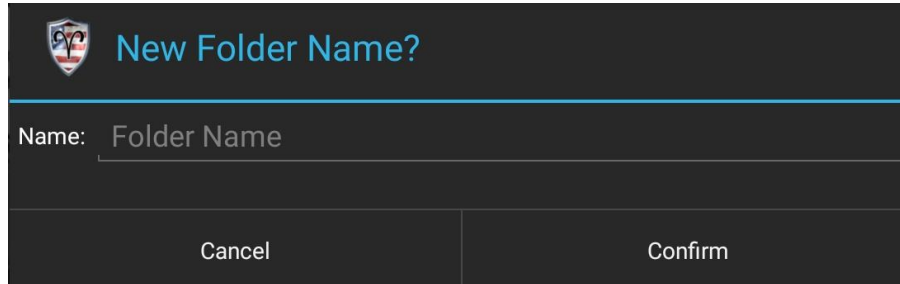

1. **Navigate** to the more options menu bar. When a file or directory is selected the functions become enabled
2. **Functions:**
 - Create Folder
 - Delete File/Folder
 - Rename File/Folder
 - Move File/Folder



TNT™ Standalone Android App: Preferences


Preferences: Overview





The TNT™ Preferences allows the user to:

- Change App Orientation
- View a user guide
- View a setup guide
- View information about TNT™
- Configure the settings on the TNT™ (ADVANCED)*

*This should be done with extreme caution!

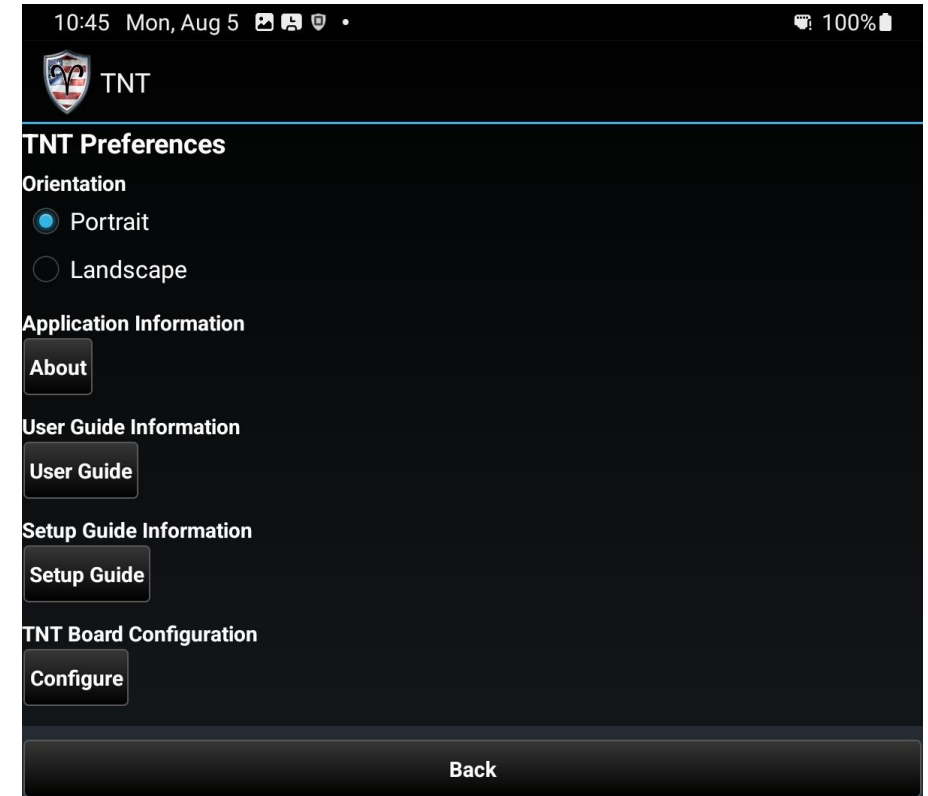

Preferences: Orientation

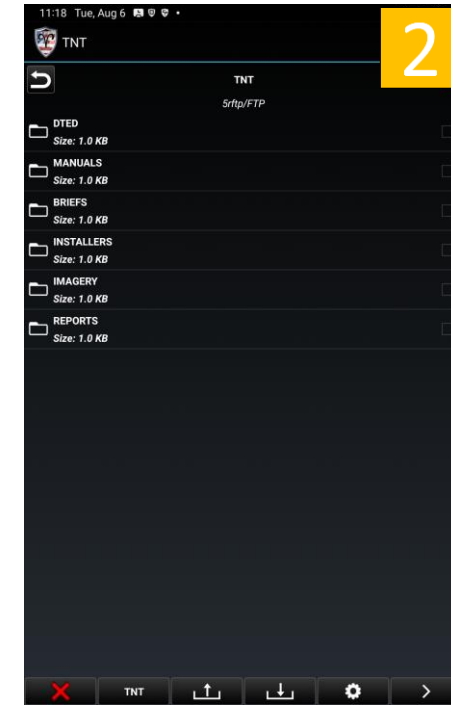
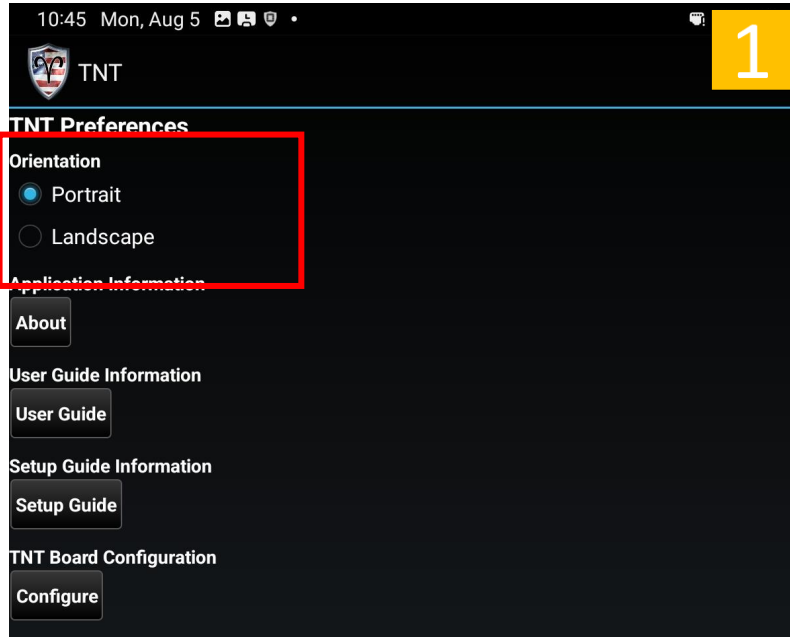


1. User can adjust the orientation of the app.
 2. Portrait
 3. Landscape

This change requires the user restart the app.





Preferences: About

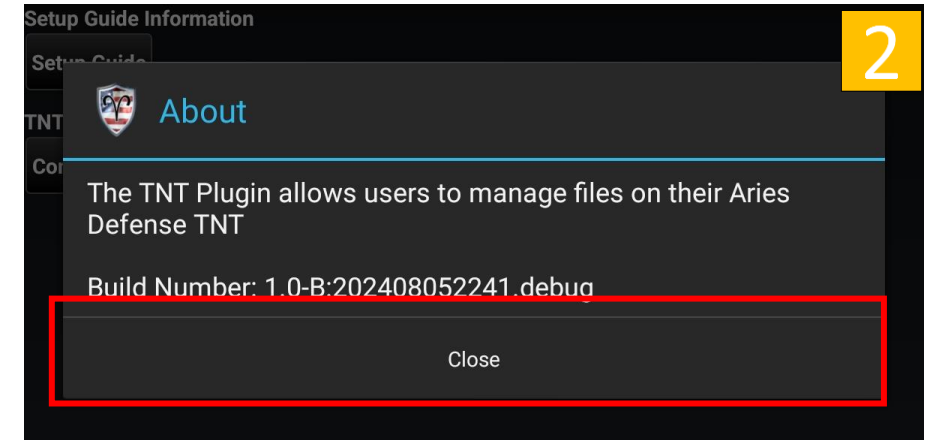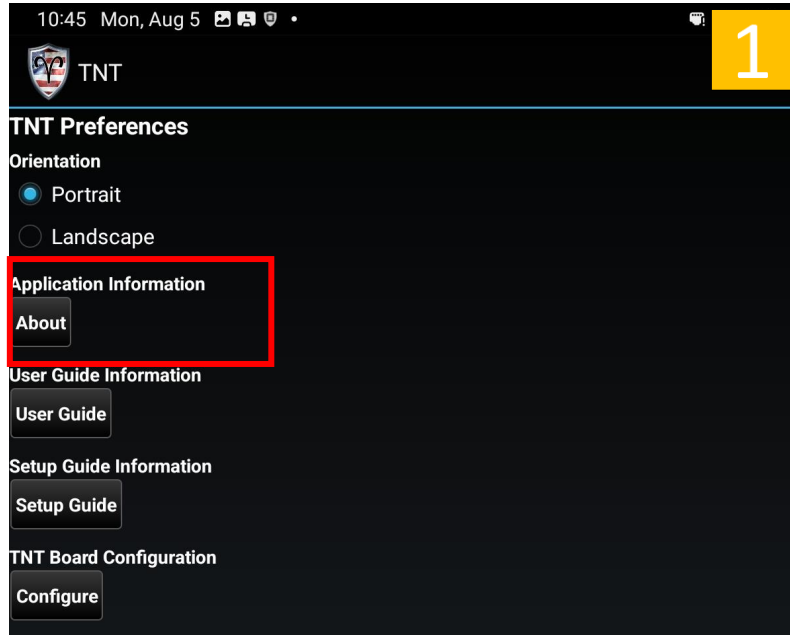


1. Locate and **tap** About TNT™ Type under Other Settings.
2. **Tap** Close to exit the About window. Continue to make changes to the preferences or **tap** back on the EUD to return to the main screen.

Preferences: User Guide

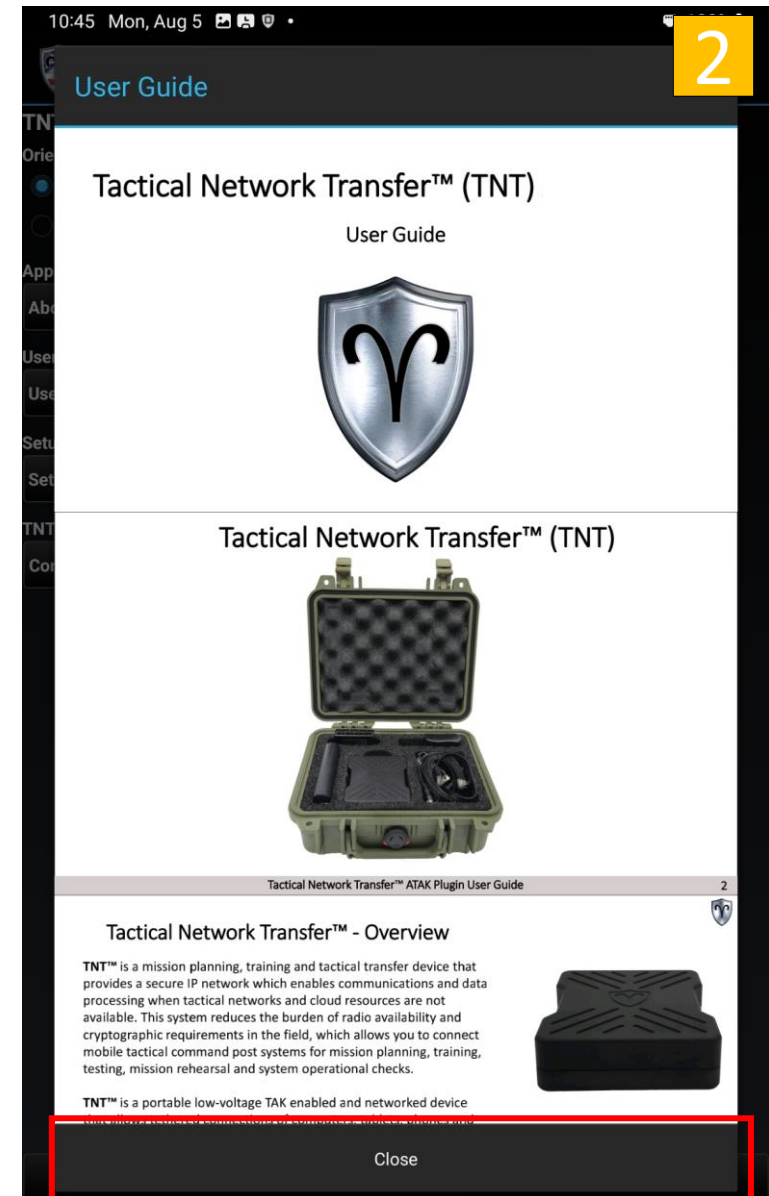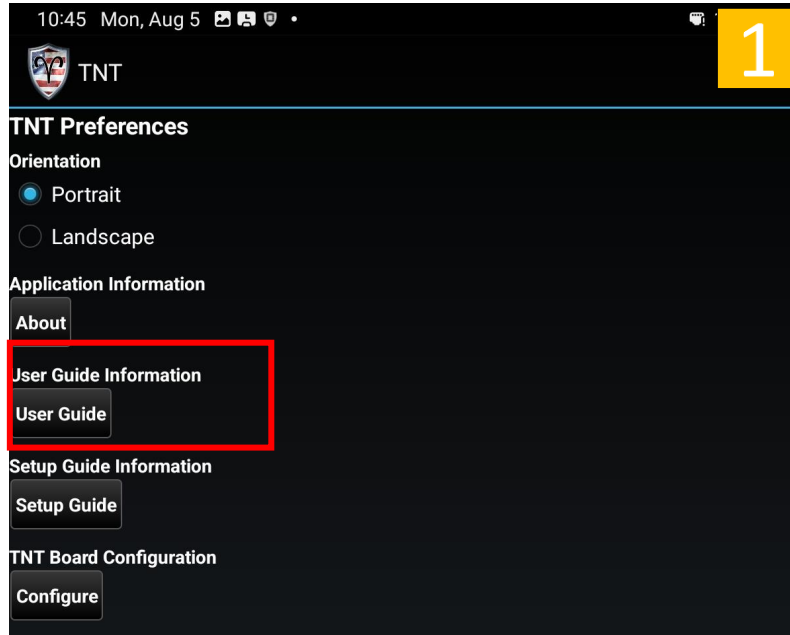


1. Locate and **tap** User Guide under General Settings.
2. **Tap** Close to exit the User Guide window.
3. Continue to make changes to the preferences or **tap** back on the EUD to return to the main screen.




Preferences: Setup Guide

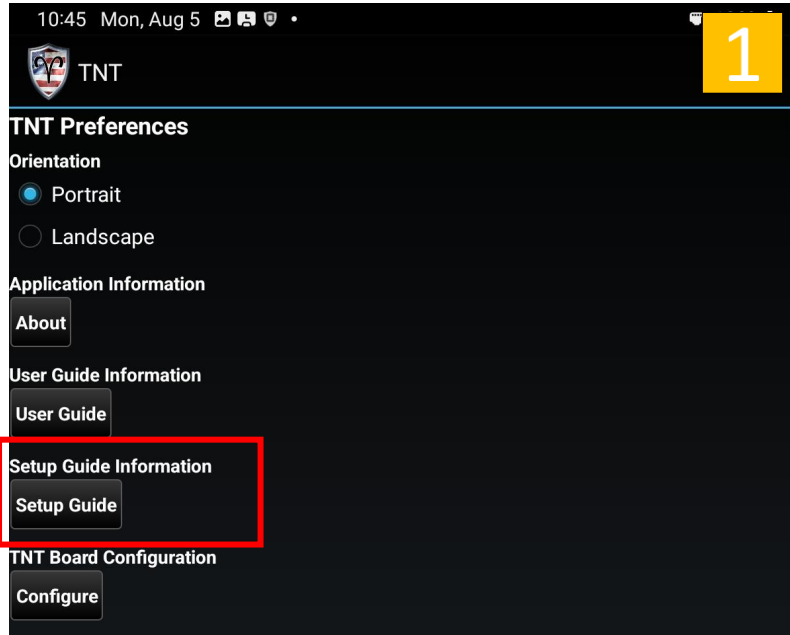

1. Locate and **tap** Setup Guide under General Settings.
2. **Tap Close** to exit the Setup Guide window.
3. Continue to make changes to the preferences or **tap back** on the EUD to return to the main screen.

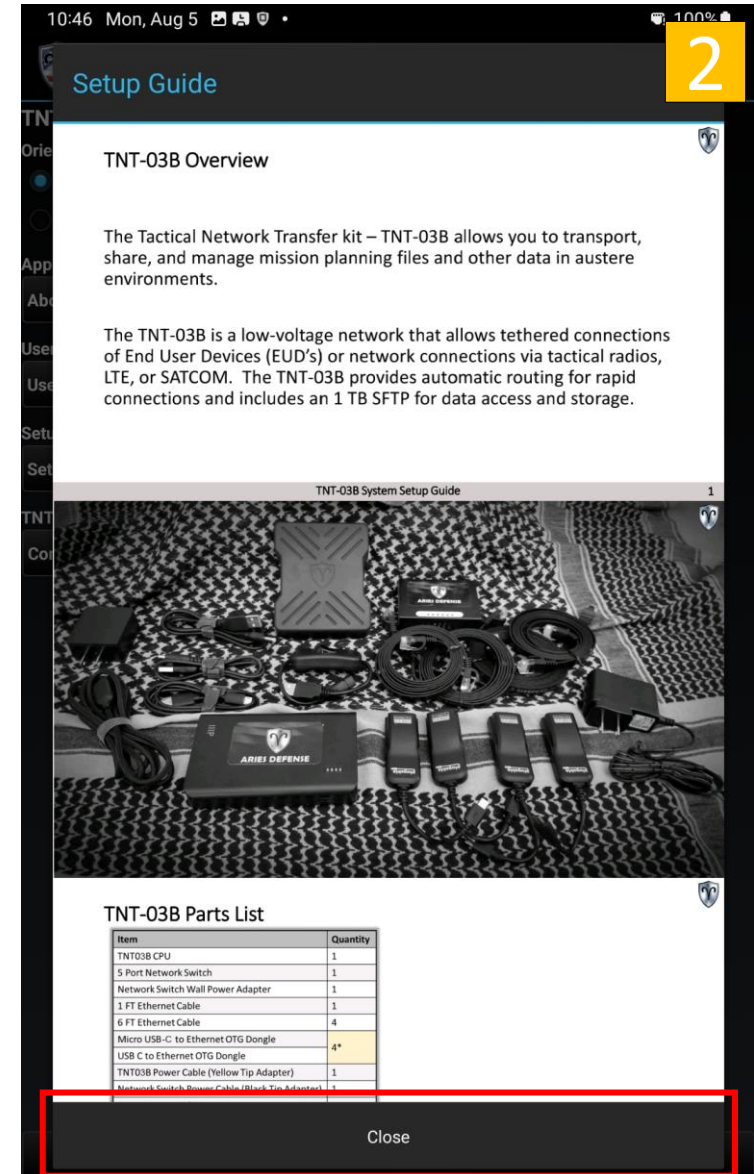

Preferences: Board Configuration

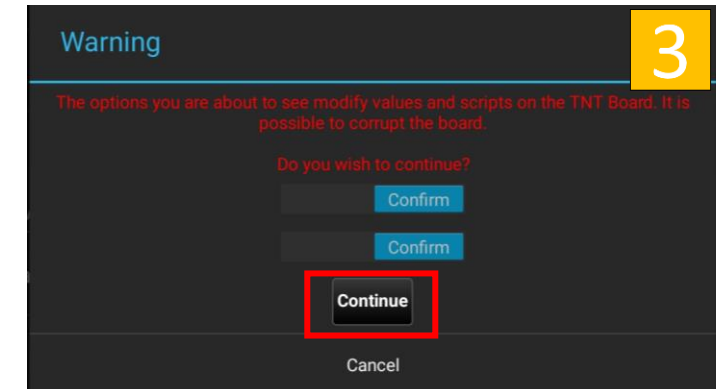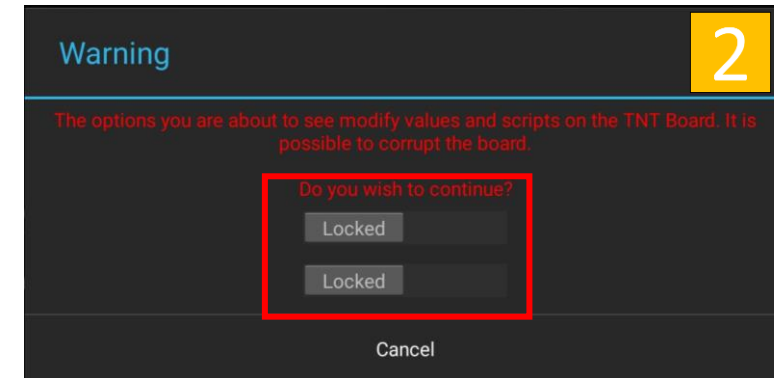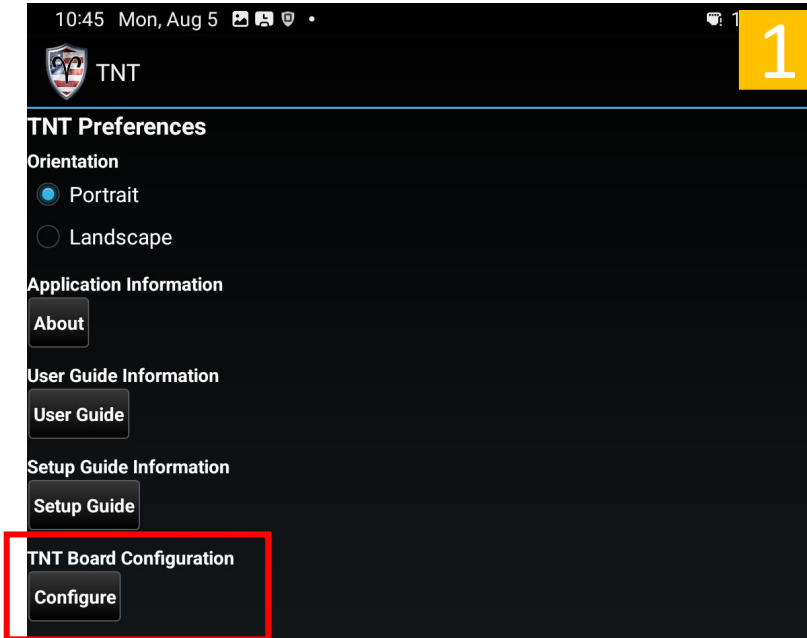

1. Locate TNT Board Configuration and **Tap** Configure
2. Read the warning message then **Tap** both Locked Buttons to set them to Confirm
3. **Tap** Continue enter the Configuration Menu.
WARNING Entering in invalid settings could potentially render the system inoperable.



TNT™ Board Configuration



TNT™ Board Configuration - Overview

Please see “TNT™ Settings – Board Configuration” on Page 31 and follow the steps to access the Board Configuration Menu. Configuring the settings in this section assumes the user has done this step.

The TNT™ Board Configuration allows the user to:




- Modify Board Name
- Modify Situational Awareness Network Settings
- Modify IP Addresses and Ports
- Modify FTP Access Network settings

****IMPORTANT**** After the configurations have been altered the board must be rebooted. This can be done by **tapping** the **Reboot TNT™ Button**. Close the TNT™ App and relaunch once the EUD receives an IP Address from the TNT™ Board.

Proceed with caution

The screenshot shows the TNT Board Configuration app interface. At the top, it displays "TNT Board Configuration" and "TNT Address: 10.6.63.10" with a green "Connected" status. Below this are buttons for "System Select", "Connect", and "Reboot TNT". The main configuration area is divided into several sections: "Configurations" (Board Name: TNT_1, Publish MCH: false, Publish ATAK: true), "SA Network Settings" (UDP Interval: 1, TCP Interval: 2, Timeout: 10, MCH UDP Group: 224.3.4.6, MCH UDP Port: 23435, MCH TCP Port: 1776, ATAK UDP Group: 239.2.3.1, ATAK UDP Port: 6969, ATAK TCP Port: 8089), "Network Settings" (IP Address: 10.6.63.10, Netmask: 255.0.0.0/8, Gateway: 10.6.63.1, DHCP: false, Multicast: true, Unicast: false), "TCP Addresses", and "Factory Defaults". A "Close" button is located at the bottom right.

TNT™ Board Configuration – Connect to Board

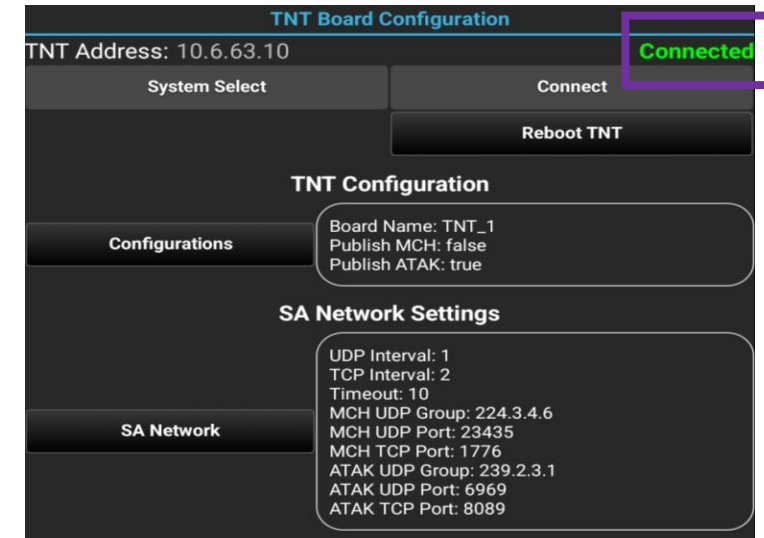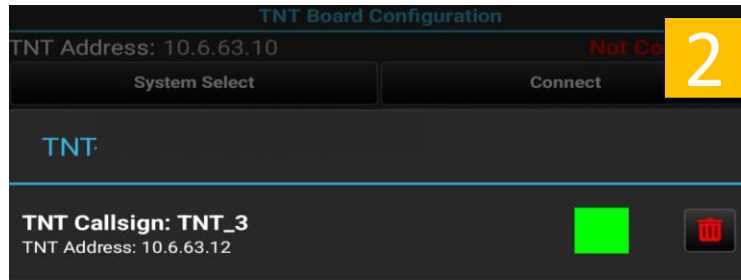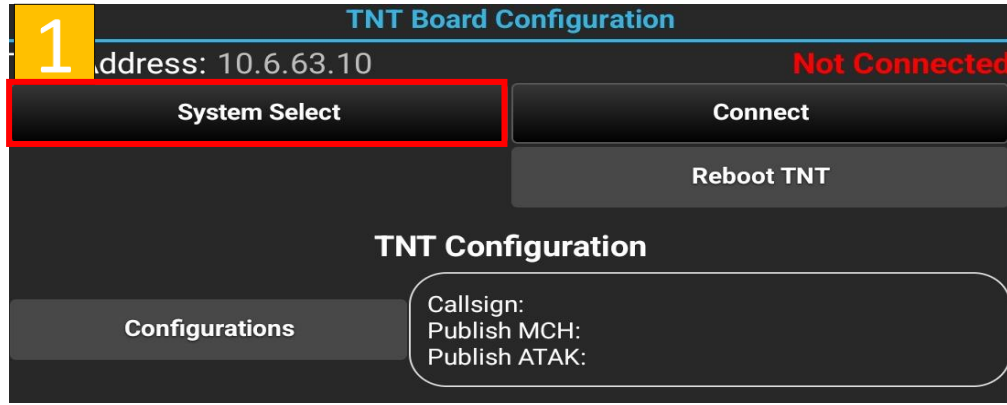

1. **Tap System Select** to choose a TNT system to login to.
2. **Tap** a TNT system from the list.
3. **Tap Connect**.

Connection Status:



- Not Connected** – The TNT™ Plugin is not logged into the board
- Connecting...** – The TNT™ Plugin is trying to establish a logon session
- Connected** – The TNT™ Plugin is currently logged into the board.



TNT™ Board Configuration

Configuration Settings

TNT™ Board Configuration – Configuration Settings

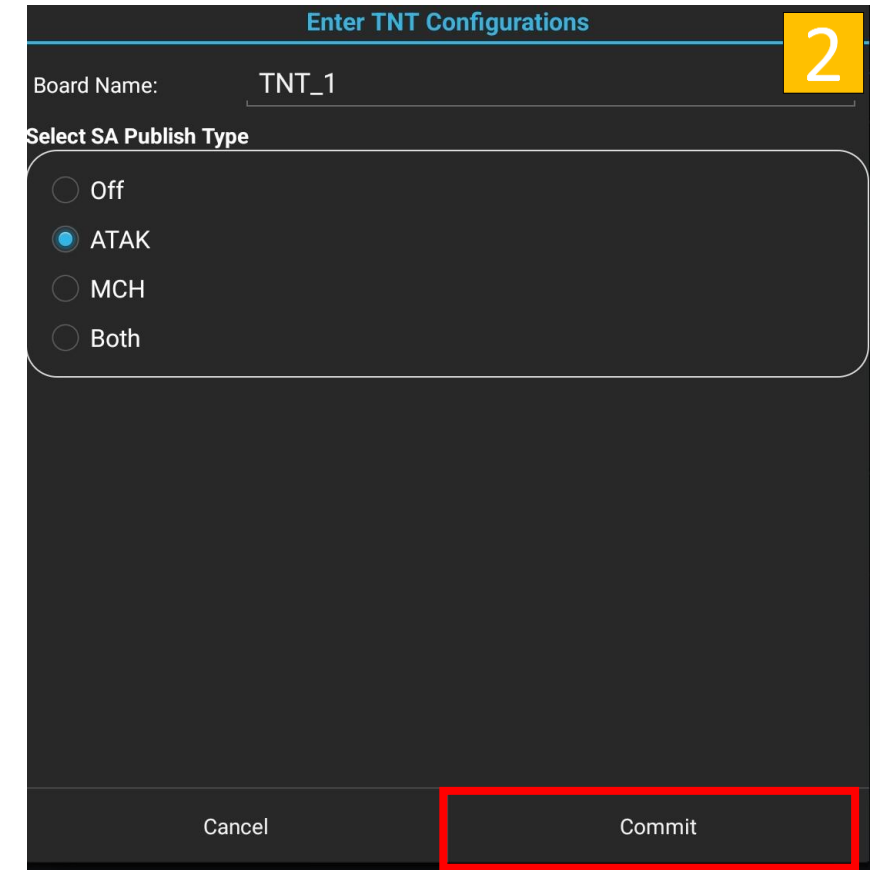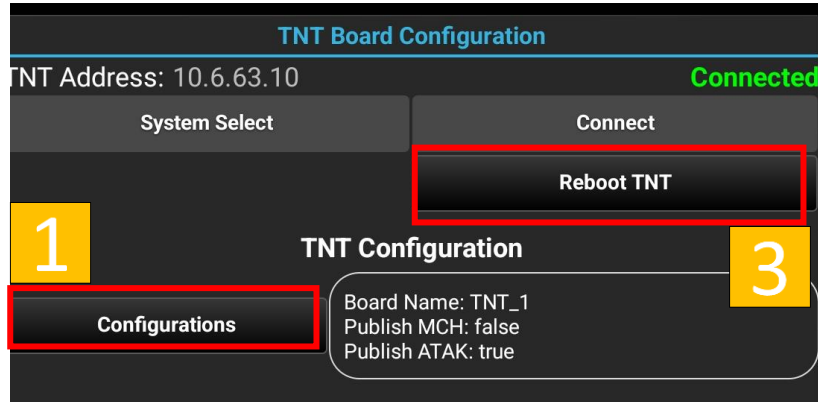



1. Locate and **tap** Configurations under Configuration Settings.
2. **Tap** Commit to apply changes when done configuring TNT Configurations.
 - Board Name - refers to the name of the Shield icon that is placed on the ATAK map. This is the name other users will see the TNT system as.
 - The SA Publish Type - will send situational awareness messages to either ATAK or MCH and can be set to publish to both (default setting)
3. You may continue to make changes to the board. When finished **Tap** the Reboot TNT button.



TNT™ Board Configuration

SA Network Settings

TNT™ Board Configuration – SA Network Settings

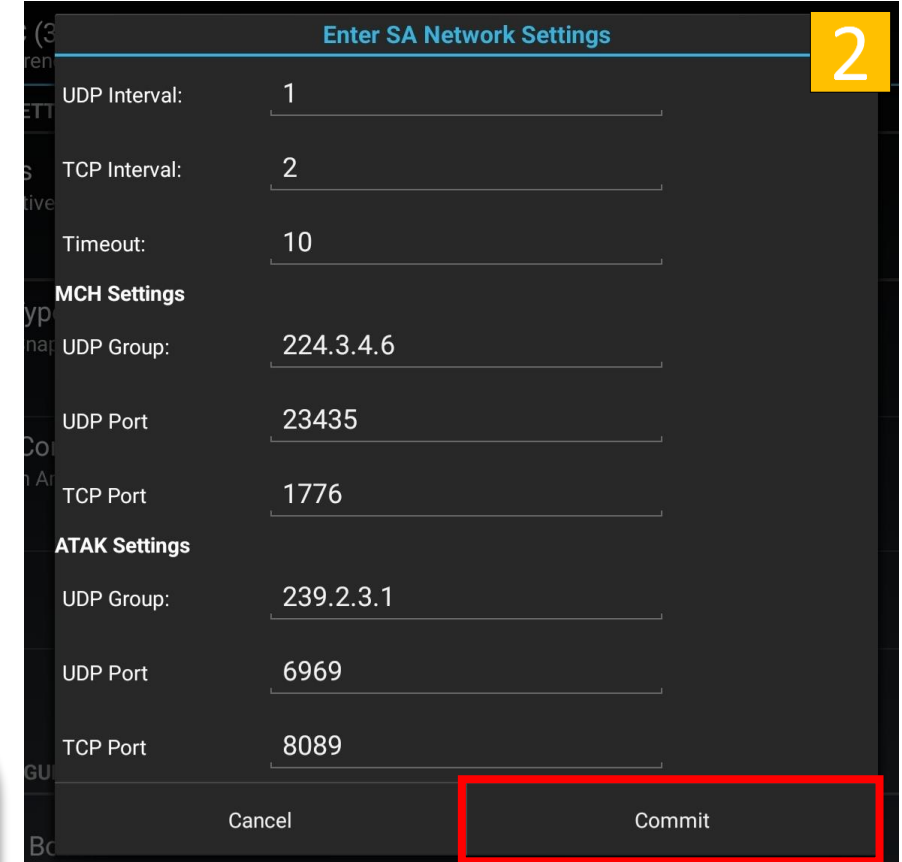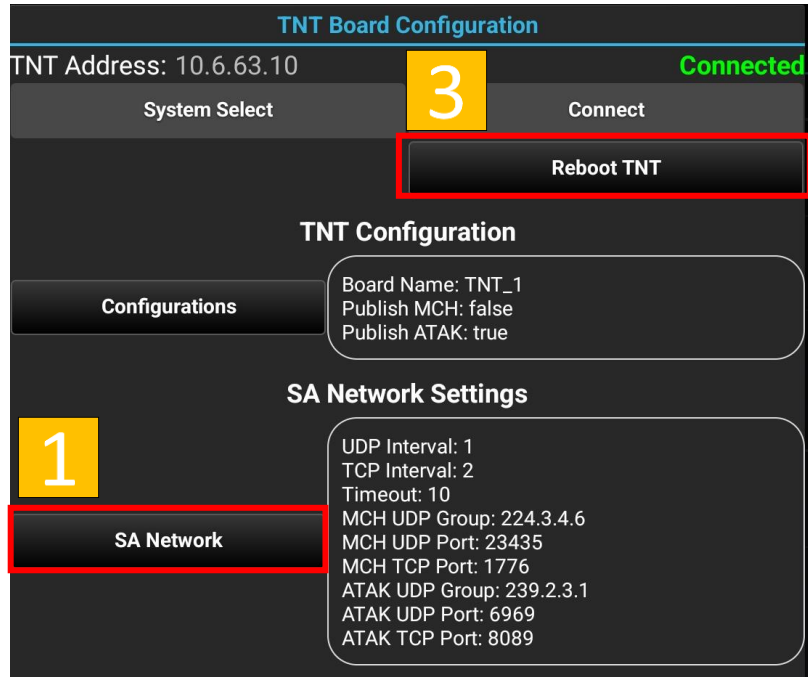

1. Locate and **tap** SA Network under SA Network Settings.
2. **Tap** Commit to apply changes when done configuring TNT SA Network Settings.

Note: Most users DO NOT NEED to change these values!

3. You may continue to make changes to the board. When finished **Tap** the Reboot TNT button.



TNT™ Board Configuration

Network Settings

TNT™ Board Configuration – Network Settings



Network Settings

1

IP Address: 10.6.63.10
Netmask: 255.0.0.0/8
Gateway: 10.6.63.1
DHCP: false
Multicast: true
Unicast: false

Network

Enter Network Settings

2

IP Address: 10.6.63.10
Netmask: 255.0.0.0
Gateway: 10.6.63.1

Netmask Input: Manual Slash

Toggle Gateway: On Off

Authoritative DHCP
 On
 Off

SA Network Protocol
 Off
 Multicast
 Unicast
 Both

Cancel **Commit**

Netmask: 8 Default: 8 Range: 8-24

Gateway: 10.151.53.1

Netmask Input: Manual Slash

Toggle Gateway: On Off

1. Locate and **tap** Network under Configuration Settings.
2. **Tap Commit** to apply changes when done configuring TNT Network Settings.



If your network configuration requires a Gateway IP Address select Unicast or Both from the Network Protocol Options

You may continue to make changes to the board. When finished **Tap** the Reboot TNT button.

Notice toggling gateway to On enables the gateways text field.

Notice changing netmask input changes the way the netmask is input.

TNT™ Board Configuration – TCP Addresses

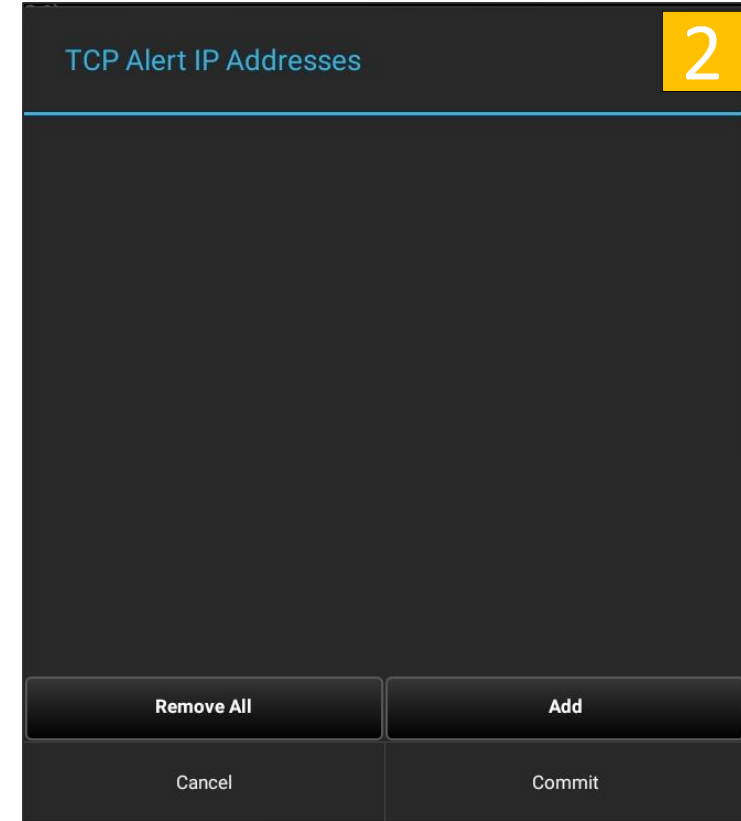
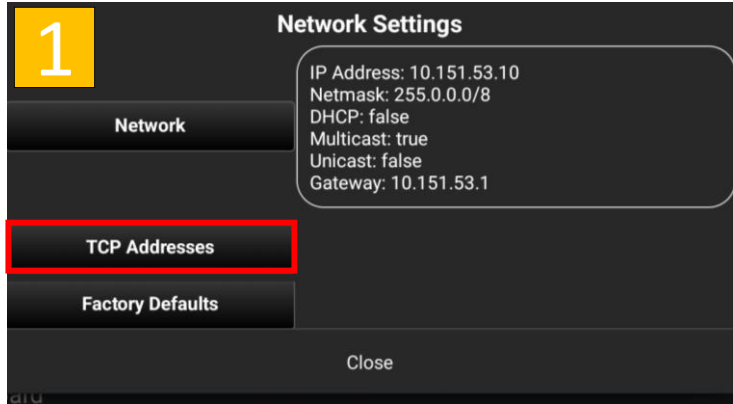


1. Locate and **tap** TCP Addresses under Configuration Settings
2. This menu will allow the user the ability to Add, Remove, and Commit IP addresses to receive TCP based alerts.

You may continue to make changes to the board. When finished **Tap** the Reboot TNT button.


Button	Description
Remove All	Remove All IP Addresses in the list
Add	Add an IP address to receive TCP Alerts
Commit	Commit newly added TCP Addresses
Cancel	Cancel current actions.

TNT™ Board Configuration – Add TCP Address

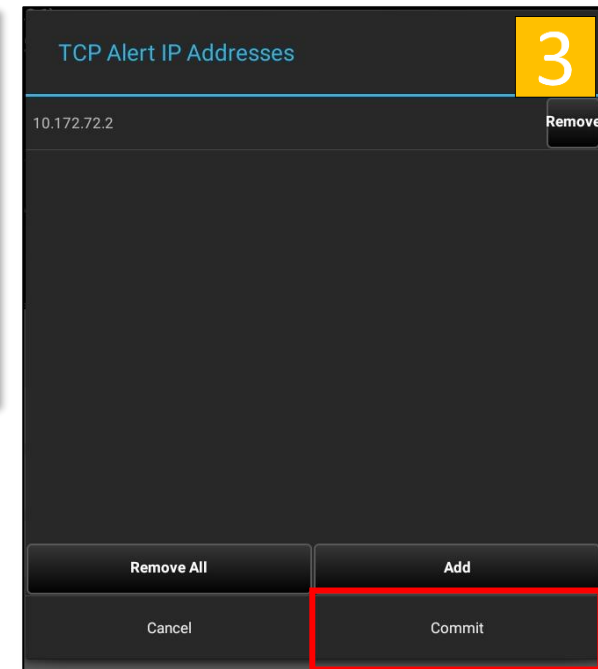
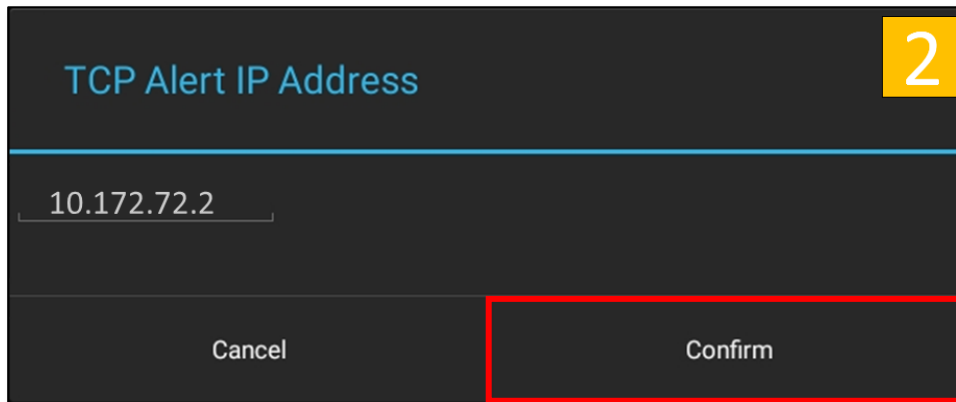


1. Locate and **tap** the Add button under TCP Alert IP Addresses Menu.
2. **Enter** an IP address to receive TCP Alerts then tap Confirm.
3. **Tap** Commit and then
4. Confirm Commit to add the IP address

You may continue to make changes to the board. When finished **Tap** the Reboot TNT button.


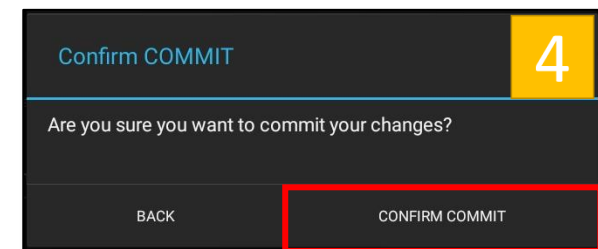


TNT™ Board Configuration – Factory Defaults

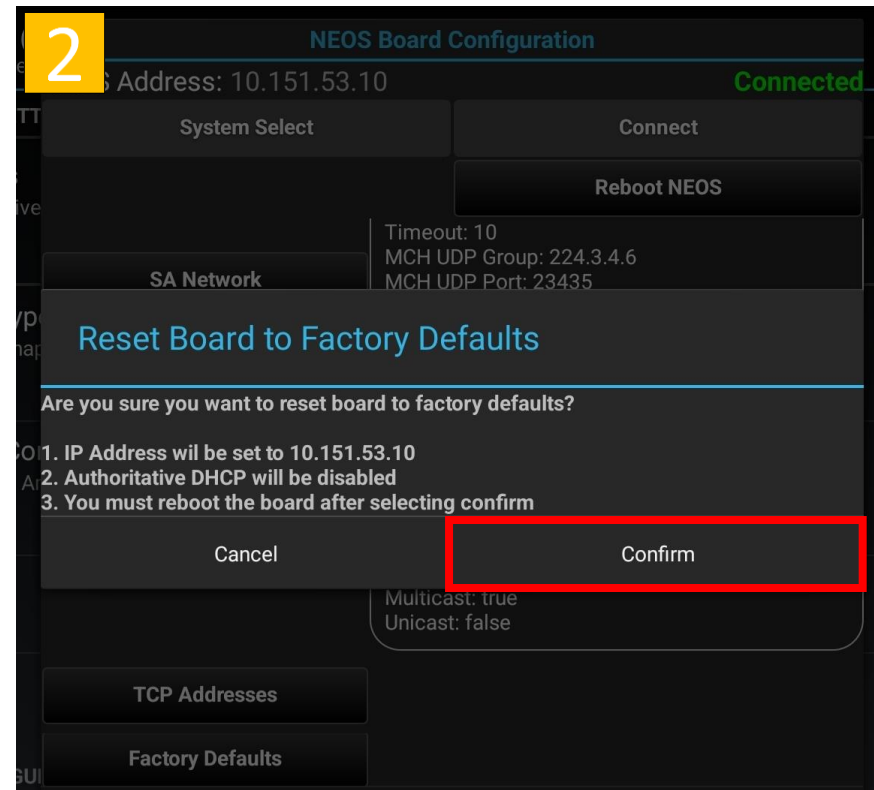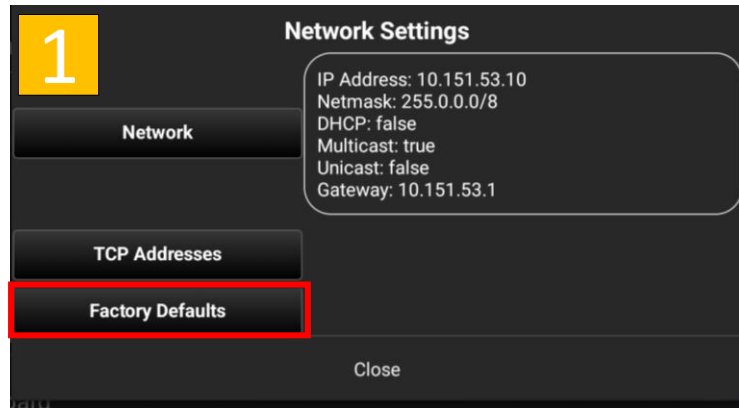

1. Locate and **tap** Factory Defaults.
2. The board will wipe out all changes you have made to it and revert to factory settings. Tap Confirm when you are ready.

TNT™ Board Configuration – Reboot

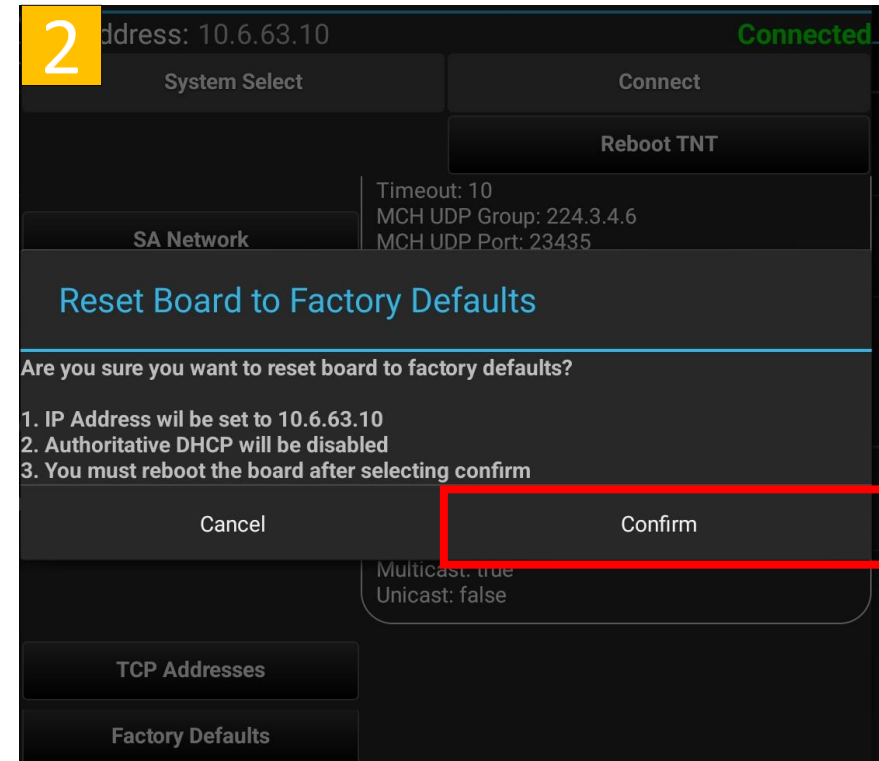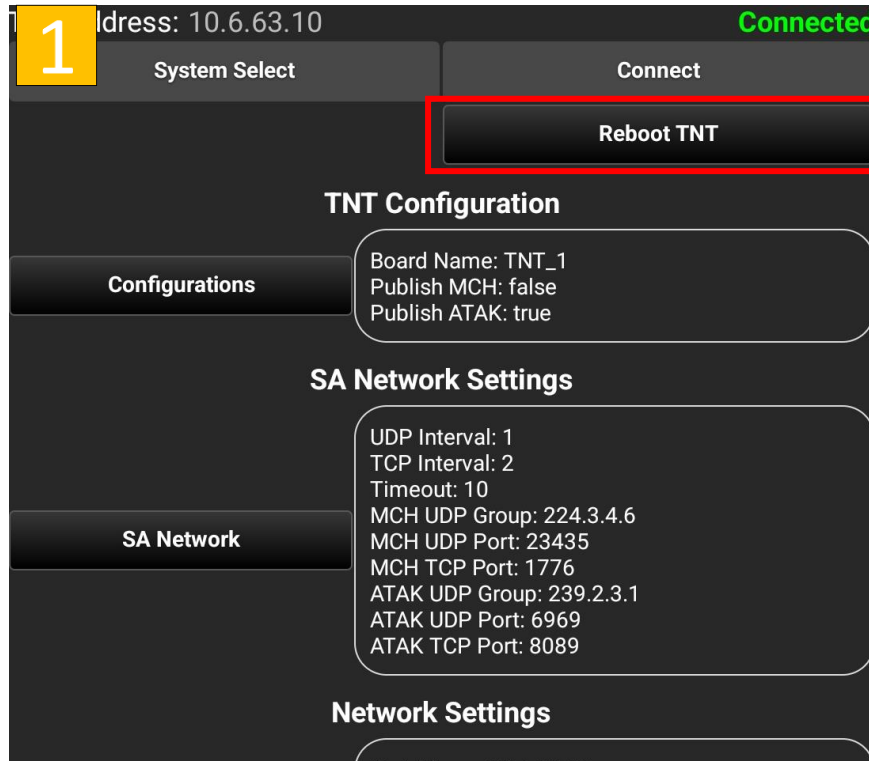

1. Locate and **tap** Reboot TNT.
2. **Tap** Confirm to initiate TNT system reboot.

